



How to use **MUSIC** IR Remoter



FLASH Function




Press **FLASH Button (Original speed)** This Bulb will be displayed in Flash function Every Bulb will start from the RED light



Press **UP Button**  (High speed)

Press **DOWN Button**  (Low speed)

FADE Function

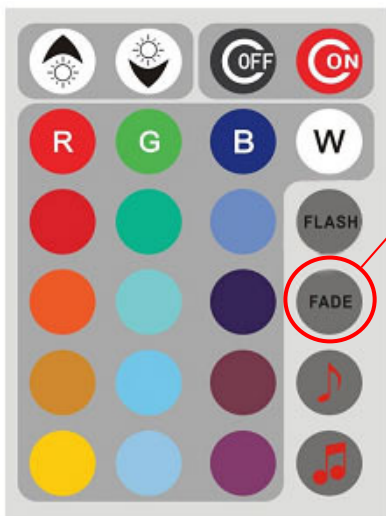

Press **FADE Button (Original speed)** This Bulb will be displayed in different mixed color Every Bulb will start from the White light



Press **UP Button**  (High speed)

Press **DOWN Button**  (Low speed)

MUSIC1 Function



Press  **Button**

The light of this Bulb will jump according to the tune of the music (>70 dB). NO MUSIC, NO LIGHT!!

Press **UP Button**  (Increasing the brightness in 10 step)

Press **DOWN Button**  (Decreasing the brightness in 10 step)



MUSIC1 Function



Press  **Button**

The light of this Bulb will jump according to the tune of the music (>70 dB). **NO MUSIC**, the bulb will display in the **FADE** mode !!



Press **UP** Button  (Increasing the brightness in 10 step)

Press **DOWN** Button  (Decreasing the brightness in 10 step)

Single Color Function



Press one color Button



Press UP Button  (Increasing the brightness in 10 step)

Press DOWN Button  (Decreasing the brightness in 10 step)